




TOTAL EDGE PROTECTION WITH EASE

PRODUCT INSTALLATION GUIDE




I-BEAM CLAMP

WEIGHT - 12.5KG / 27.6LBS

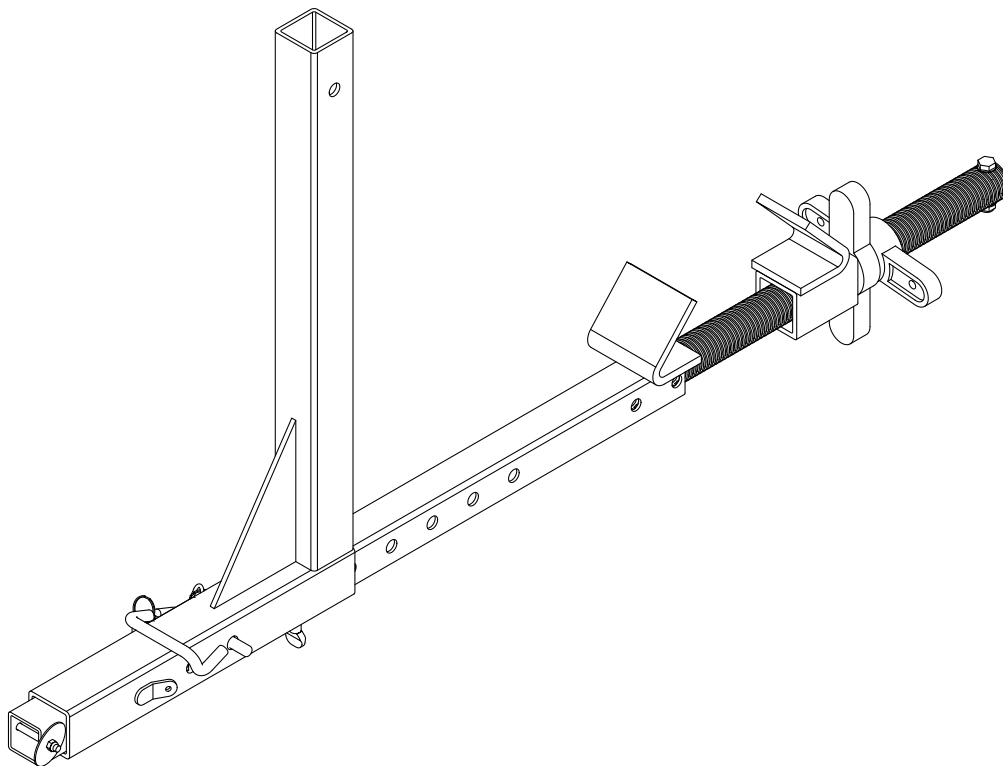


EU024 / NA024 | 125MM - 310MM / 5" - 1' 1/4"

Maximum Component Spacing

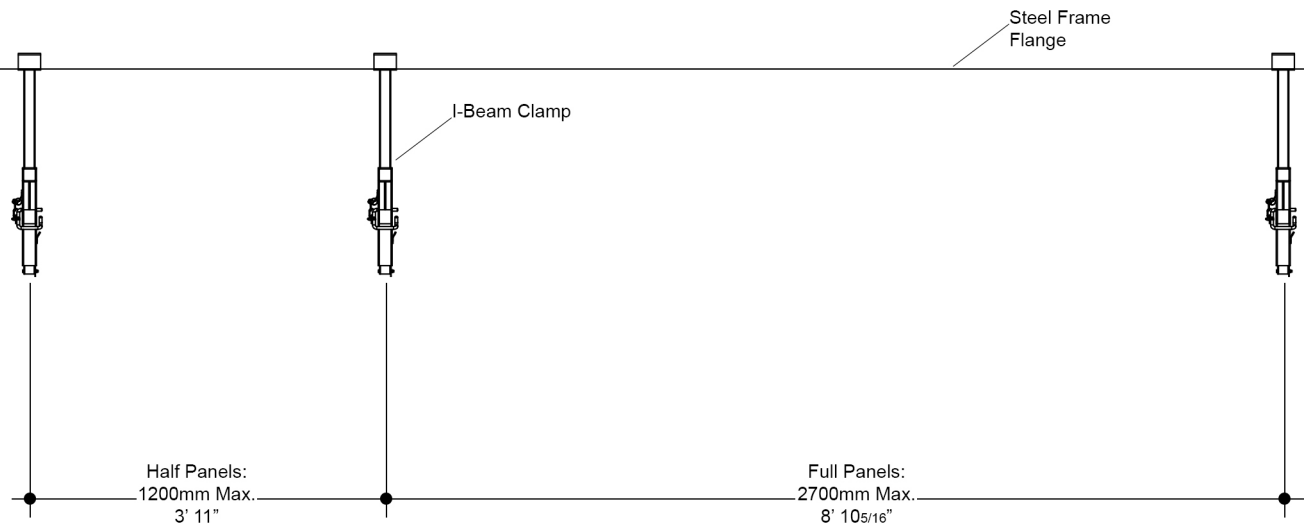


IMPORTANT: DISASSEMBLY PROCESS MUST FOLLOW THE INSTRUCTIONS IN REVERSE ORDER. IMPROPER INSTALLATION OR REMOVAL COULD RESULT IN SERIOUS INJURY OR DEATH.

1

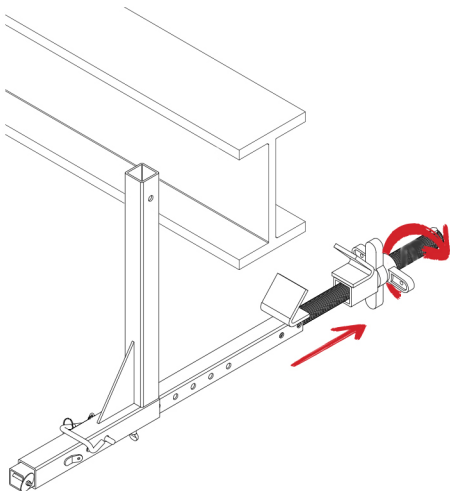


1. Extend the clamp so that it has sufficient clearance to fit around the flange of the beam.

2

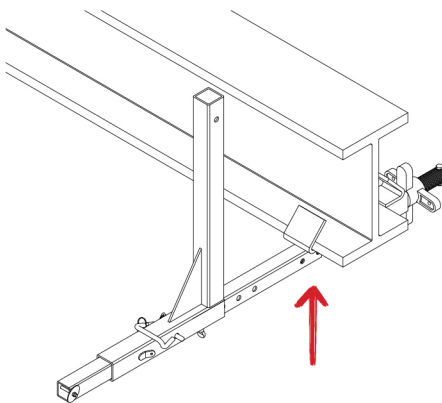


2. Position the clamp on the beam.

3

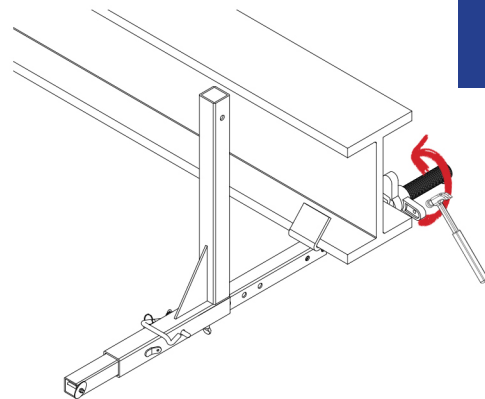


3. Tighten the wingnut and tighten by hitting with a hammer once.

1

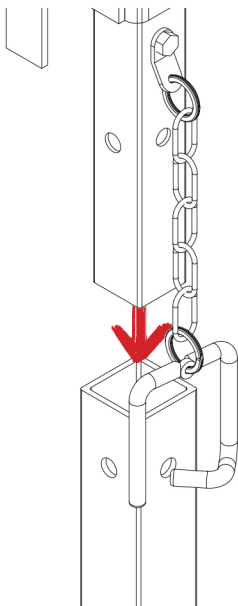


1. Place post into socket.

2

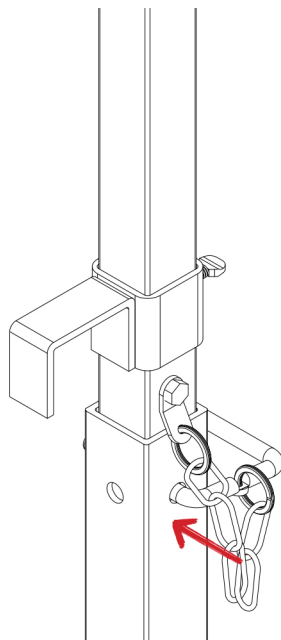


2. Push Rapid Pin through socket & steel frame post.

3

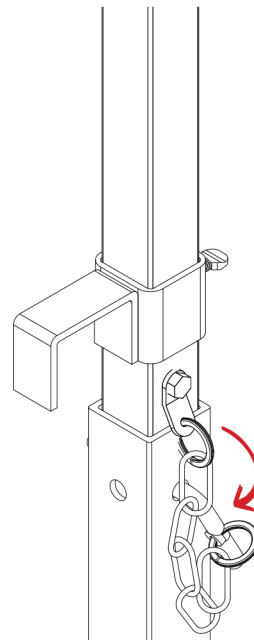


3. Rotate Rapid Pin into locked position.

INDEXING I-BEAM CLAMP

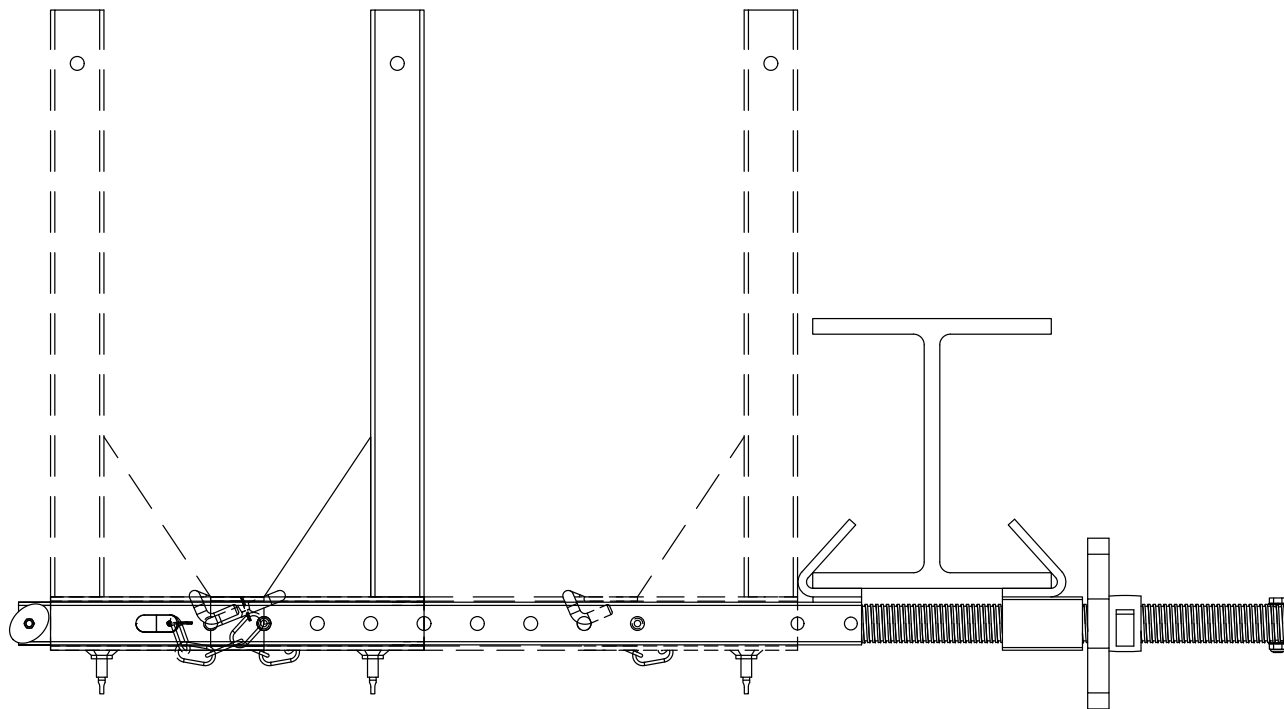


IMPORTANT: DISASSEMBLY PROCESS MUST FOLLOW THE INSTRUCTIONS IN REVERSE ORDER. IMPROPER INSTALLATION OR REMOVAL COULD RESULT IN SERIOUS INJURY OR DEATH.

1

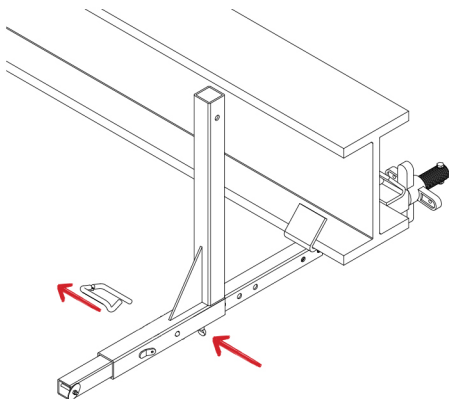


1. Remove the Rapid Pin from the arm and loosen the sliding thumb screw from the underside of the clamp.

2

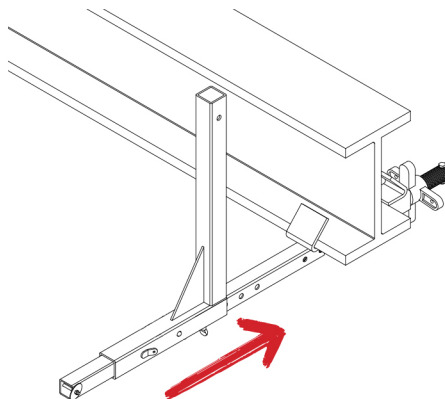


2. Slide the arm into the required position.

3

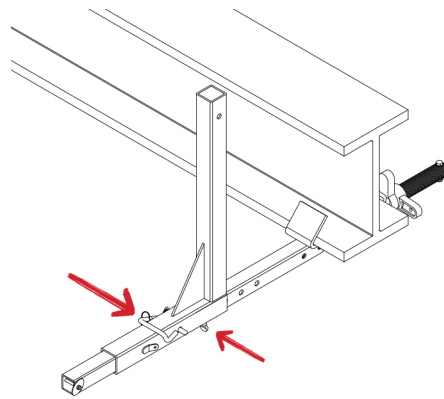

3. Re-insert the Rapid Pin and tighten the thumb screw to lock the sliding arm in place.

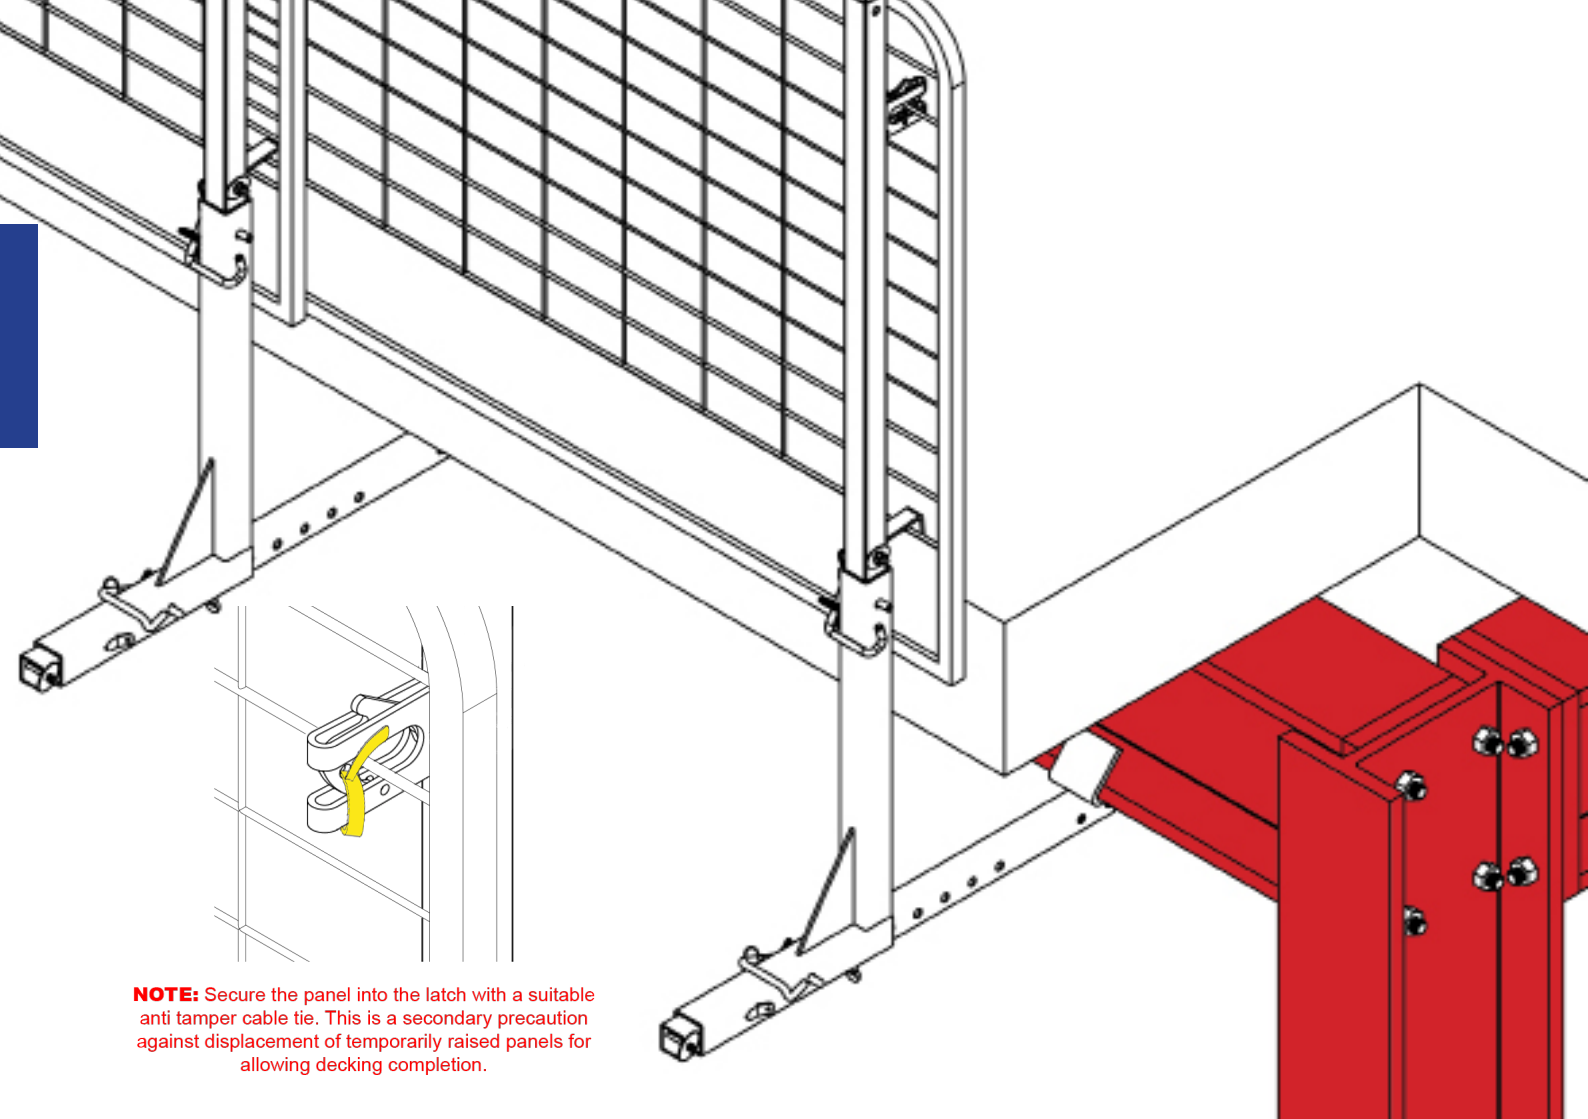

NOTE: Secure the panel into the latch with a suitable anti tamper cable tie. This is a secondary precaution against displacement of temporarily raised panels for allowing decking completion.