


# RAPID BARRIERS


RAPID BARRIER FULL - 21.5KG / 47.4LBS

RAPID BARRIER HALF - 11.5KG / 25.4LBS


RAPID BARRIER QUARTER - 6.0KG / 13.3LBS

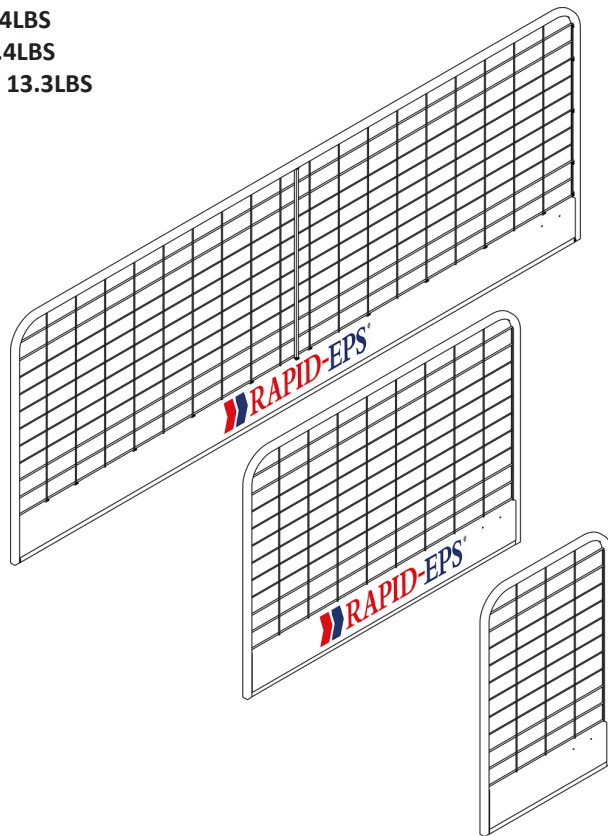


FULL (2900MM / 9'6") - EU003 / NA003 | HALF (1400MM / 4'7") - EU005 / NA005 | QUARTER (655MM / 2'2") - EU085 / NA085

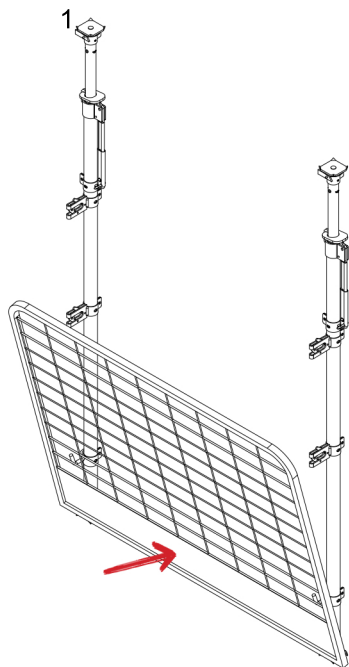

1. Locate the bottom hook first by angling the barrier over the hook and pass through the mesh. This will allow the barrier to be lowered to the ground and lock on the hook.

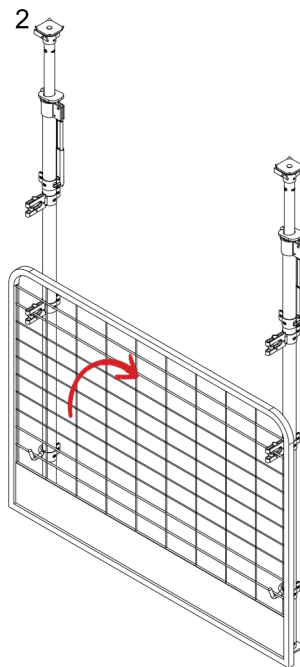


2. Let the barrier sit on the floor and push the top of the barrier towards the posts so that the latch engages with the barriers horizontal mesh wire.

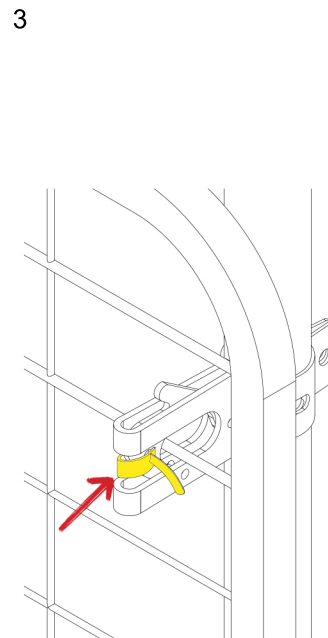


3. For additional security a cable tie can be added (Optional)


**IMPORTANT:** DISASSEMBLY PROCESS MUST FOLLOW THE INSTRUCTIONS IN REVERSE ORDER. IMPROPER INSTALLATION OR REMOVAL COULD RESULT IN SERIOUS INJURY OR DEATH.

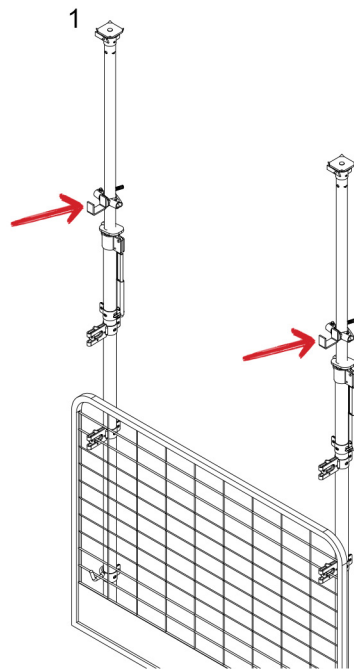

1. Fix the Rapid Clamp to the posts.

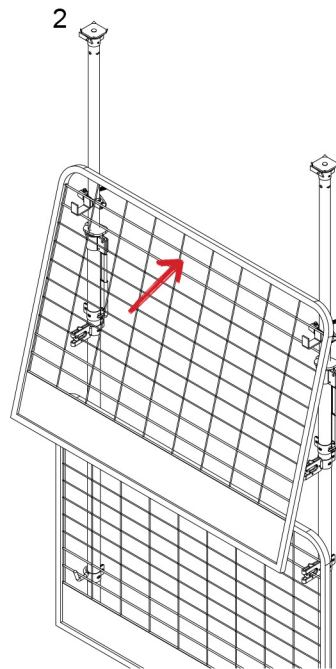

2. Angle the top of the barrier towards the posts and locate the top mesh bar into the Rapid Clamps.

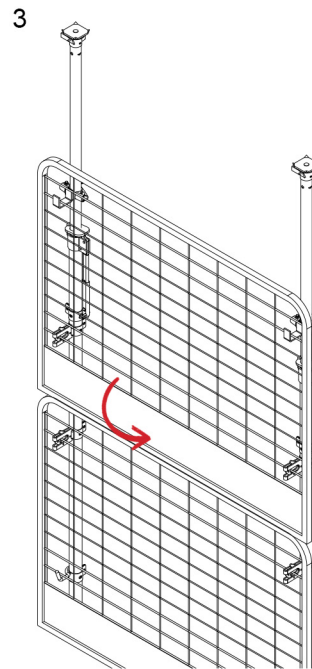

3. Push the lower part of the Rapid barrier towards the post and fix into the lower latches. Secure with a cable tie (Optional).



### POST CENTRES

FULL BARRIER - 2700MM / 9'

HALF BARRIER - 1200MM / 4'

QUARTER BARRIER - 455MM / 1' 6"

