



SLAB GRAB

WEIGHT - 10.5KG / 23.2LBS

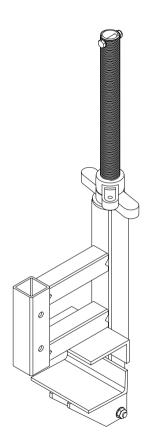

EU008 / NA008 - ADJUSTABLE FROM 100MM - 325MM

Maximum Component Spacing

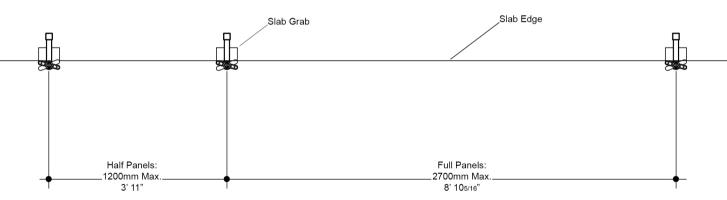

IMPORTANT: DISASSEMBLY PROCESS MUST FOLLOW THE INSTRUCTIONS IN REVERSE ORDER. IMPROPER INSTALLATION OR REMOVAL COULD RESULT IN SERIOUS INJURY OR DEATH.


1. Place the Slab Grab over the edge of the Slab

2. Lower the clamp arm to meet the slab.

3. Tighten the wingnut into place.


4. Using a hammer, ensure the wingnut is tight (one strike should be sufficient).

1

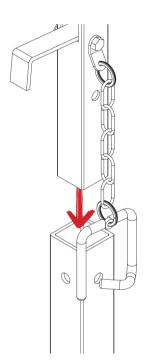


1. Place post into socket.

2

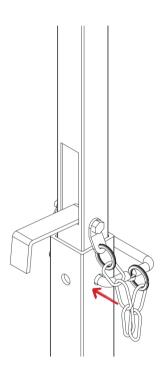

2. Push rapid pin through base and support post.

3

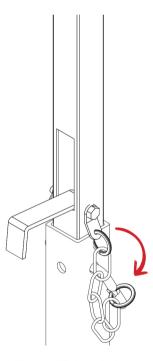

3. Rotate rapid pin into locked position.